




little tikes

littletikes.com

- Catalogue des produits
- Nouveaux jouets
- Service clientèle
- Pièces de rechange
- Concours publicitaire
- Rejoignez notre club
- Catálogo de productos
- Juguetes nuevos
- Servicio al cliente
- Piezas de repuesto
- Sorteos
- Únase a nuestro club
- Product catalog
- New toys
- Customer service
- Replacement parts
- Sweepstakes
- Join our club



4504

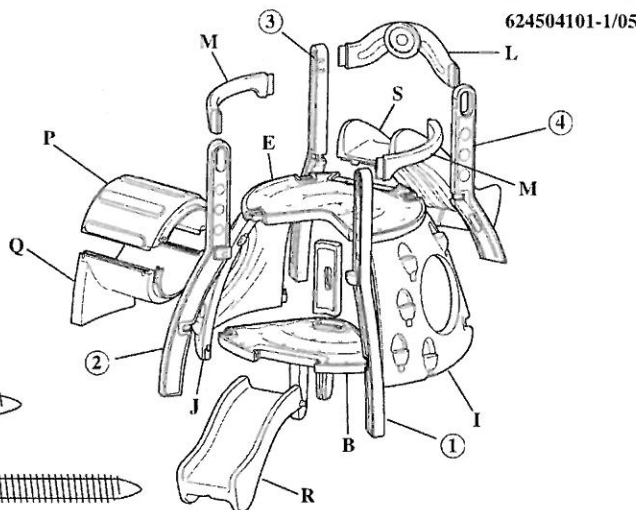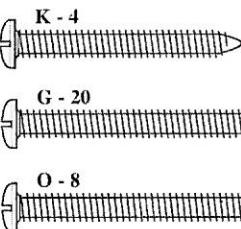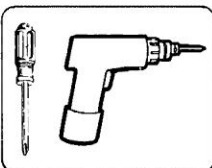

624504101-1/05

ENGLISH

ENDLESS ADVENTURES™ DOUBLE DECKER SUPER SLIDE™

Ages 3 - 8 years

Please save sales receipt for proof of purchase.

ADULT ASSEMBLY REQUIRED.

2 people are required for assembly.

WARNING:

- Keep these instructions for future reference.
- Prior to assembly, this package contains small parts. Hardware which is a choking hazard and may contain sharp edges and sharp points. Keep away from children until assembled.
- Tighten hand surfaces, avoid contact in head or other sensitive injuries. Never place on concrete, asphalt, wood, packed earth or other hard surfaces. Carpet over hard floors may not prevent injury. Always use protective matting on the ground under and surround the play product component according to the enclosed "Consumer Information Sheet for Playground Surface Materials." Maximum fall height protection up to 6 feet (2m) required.
- Adult supervision required. Do not leave children unattended.
- This product is intended for use by children ages 3 to 8 years.
- Maximum weight per child: 50 lbs. (22 kg), Limit 3 children.
- Shoes must be worn at all times.
- This product is intended for outdoor domestic, family use only.

ASSEMBLY HINTS

Illus. 1-3: Attach leg to platform by wiggling leg back and forth until it is seated in the platform opening.

Illus. 9-12: Push down hard on top platform to lock side walls into supports.

Illus. 14 & 16: Push down hard on top platform when ascending stairs to eliminate any gaps.

Illus. 25: Ensure top deck is level and tilted, as shown.

Illus. 26 & 27: Part R can be attached either as a slide (26) or as a climbing ramp (27).

CAUTION:

- Observing the following statements and warnings reduces the likelihood of serious or fatal injury.
- Place this product on level ground, at least 6 (2 m) away from any object. Obstacles to be avoided include, but are not limited to, fences, buildings, garages, houses, overhead branches, laundry lines or electrical wires.
- It is recommended that the orientation of the assembled product be such that direct sunlight is minimized on surfaces intended for standing or sitting.
- Instruct children on proper use of this product only after properly placed, and not in a manner other than intended.
- Do not allow children to climb on product when product is wet.
- Instruct children not to attach items to the product that are not specifically designed for use with the product such as, but not limited to, jump ropes, clothes lines, pet leashes, cables and chains, as they may cause a strangulation hazard.
- Dress children appropriately: avoid loose fitting clothing such as ponchos, scarves, etc. that are potentially hazardous while using this equipment.

MAINTENANCE

- Check all hardware twice monthly during the usage period and tighten as required. It is particularly important that this

procedure be followed at the beginning of each season. Replacement should be made in accordance with the manufacturer's instructions.

- Take this product indoors or do not use outdoors when temperatures fall below 0°F (-18°C).
- Sand touched areas on tubular members and repaint using a nonlead-based paint meeting the requirements of 16 CFR Part 1303.

DISPOSAL

- Disassemble and dispose of equipment in such a manner that no hazardous conditions, such as but not limited to, small parts and sharp edges, exist at the time equipment is discarded.

CONSUMER SERVICE

www.littletikes.com

TOLL-FREE NUMBER:

1-800-321-0183

Monday - Friday

The Little Tikes Company

PO Box 2277

2180 Barlow Road

Hudson, Ohio 44236-0877

Local Hardware:

Little Tikes U.K. & Ireland

900 Paradise Drive, First Floor

Northampton NN4 0YR U.K.

Tel: +44 (0) 800 521158

Monday - Friday 09.30 - 16.45

Fax: +44 (0) 1604 575000

Printed in U.S.A. D/E 7-2004 The Little Tikes Company

A Division of NewellRubbermaid

LIMITED WARRANTY

The Little Tikes Company makes fun, high quality toys. We warrant to the original purchaser that this product is free of defects in materials or workmanship for one year from the date of purchase (dated sales receipt is required for proof of purchase). At the sole election of The Little Tikes Company, for only products available under this warranty will be either replacement of the defective part of the product or refund the purchase price of the product. This warranty is valid only if the product has been assembled and maintained per the instructions. That warranty does not cover abuse, accident, consumer issues such as fading or scratching from rental use, or any other cause not arising from defects in material and workmanship.

U.S.A. and Canada: For warranty service or replacement part information, please visit our website at www.littletikes.com, call 1-800-321-0183 or write to: Consumer Service, The Little Tikes Company, 2180 Barlow Road, Hudson OH 44236, U.S.A. Some replacement parts may be available for purchase after warranty expires - contact us for details.

Outside U.S.A. and Canada: Contact place of purchase for warranty service. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. *The warranty period is three (3) months for daycare or commercial purchases.

FRANÇAIS

SUPER TOBOGGAN À DEUX NIVEAUX

Âge : 3 à 8 ans

Prêt à conserver le reçu comme preuve d'achat.

MONTAGE PAR UN ADULTE REQUIS

Le montage nécessite 2 personnes.

ATTENTION :

- Conserver ces instructions à titre de référence.
- Avant l'assemblage du produit, ce package contient des petites pièces de matériel qui peuvent présenter un risque d'étouffement, et des bords et des attaches tranchants. Tenir à l'écart de la portée des enfants avant l'assemblage complet.
- Les chutes sur des surfaces dures peuvent provoquer des blessures à la tête ou d'autres blessures graves. Ne jamais installer l'appareillage sur du ciment, de l'asphalte, de la terre compactée, du bois ou d'autres surfaces dures. De la moquette sur des sols durs n'empêche pas les accidents. Utiliser toujours un revêtement protecteur sur le sol, sous et autour du matériel du terrain de jeux et que l'indique. Ne faire d'installation ou d'entretien sur les matériaux de revêtement de terrain de jeux. Hauteur maximale de protection contre les chutes requise jusqu'à 2 mètres (6 pieds).
- La surveillance par un adulte est recommandée. Ne laisser jamais un enfant sans surveillance.
- Ce produit n'a pas été conçu pour les enfants de 3 - 8 ans.
- Poids maximum par enfant : 22 kg. Limité à 3 enfants.
- Les enfants doivent porter des chaussures.
- Ce produit n'est conçu que pour une utilisation domestique et familiale, à l'extérieur.

CONSEILS D'ASSEMBLAGE

Illustration 1-3 : Fixez le pied à la plateforme en le déplaçant d'avant en arrière pour bien le loger dans l'ouverture de la plateforme.

Illustration 9-12 : Appuyez fermement vers le bas sur la plateforme du haut pour bloquer les murs latéraux dans les supports.


Illustrations 14 et 16 : Appuyez fermement vers le bas sur la plateforme du haut lors du montage des vis pour éliminer tout écart.

Illustration 25 : Alignez les points sur le sol et le tunnel tel qu'il illustre.

Illustration 26 et 27 : La pièce R peut être connectée soit comme glissière (26) soit comme rampe d'escalade (27).

ATTENTION :

- L'observation des règles et des précautions suivantes diminue les risques d'accidents graves ou mortels.
- Installez ce produit sur un sol nivelé, à une distance d'au moins 2 m (6') de tout objet. Les objets à éviter incluent sans s'y limiter : les barrières, les bâtiments, les garages, les manèges, les branches pendantes, les câbles à linge ou les fils électriques.
- Nous vous recommandons d'orienter le produit assemblé de manière à minimiser l'exposition au soleil des surfaces compactes pour se tenir debout ou s'asseoir.
- Apprenez aux enfants comment utiliser cet appareillage de manière appropriée, seulement après avoir correctement effectué le montage et l'installation. Et non pas d'une manière qui ne correspondrait pas à la façon de l'appareillage.
- Ne pas laisser les enfants grimper sur l'appareillage lorsque ce dernier est inutilisé.

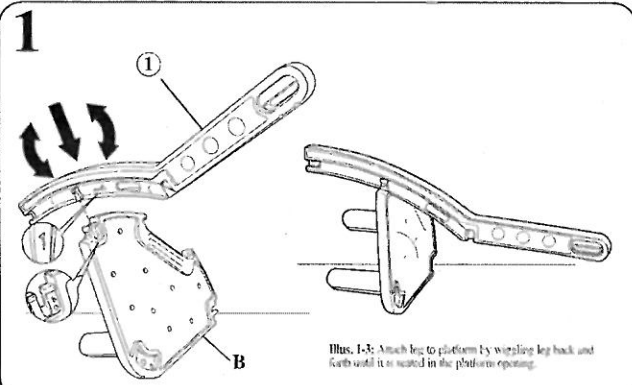

Illus. 1-3: Attach leg to platform by wiggling leg back and forth until it is seated in the platform opening.

