

5-in-1 Super Sports Bouncer • Parc de jeux super sport 5 en 1
Gimnasio inflable súper deportivo 5 en 1

Instructions for Installation and Operation • Instructions d'installation et d'utilisation
Instrucciones de instalación y funcionamiento

Ages: 3 years and up • 3 ans et plus • 3 años adelante

**CAUTION - ELECTRICALLY
OPERATED PRODUCT.**


NOT RECOMMENDED FOR CHILDREN
UNDER 3 YEARS OF AGE. AS WITH ALL
ELECTRIC PRODUCTS, PRECAUTIONS
SHOULD BE OBSERVED DURING USE AND
HANDLING TO PREVENT ELECTRIC SHOCK.

**ATTENTION - CE PRODUIT
FONCTIONNE À L'ÉLECTRICITÉ**

IL EST DÉCONSEILLÉ POUR LES ENFANTS DE
MOINS DE 3 ANS. COMME AVEC TOUS LES
PRODUITS ÉLECTRIQUES, PRENEZ LES
PRÉCAUTIONS NÉCESSAIRES POUR
MANIPULER ET UTILISER CE PRODUIT AFIN DE
PRÉVENIR LES RISQUES DE CHOC ÉLECTRIQUE.

**PRECAUCION.
PRODUCTO ELECTRICO.**

NO SE RECOMIENDA PARA NIÑOS
MENORES DE 3 AÑOS DE EDAD. COMO
CON TODO PRODUCTO ELECTRICO DEBEN
OBSERVARSE CIERTAS PRECAUCIONES
DURANTE EL MANEJO Y USO PARA EVITAR
CHOQUES ELECTRICOS.

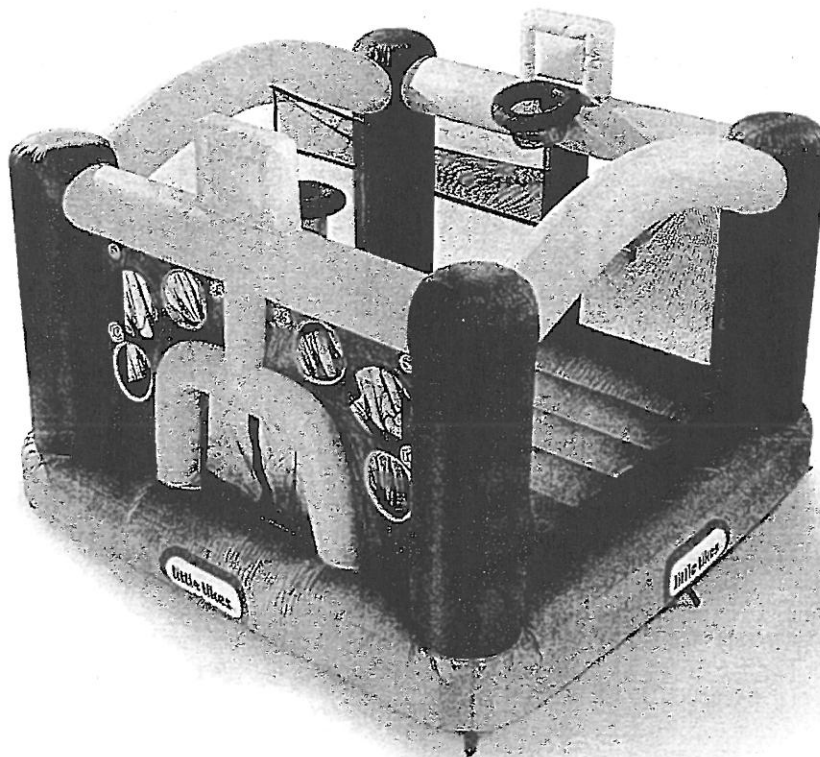

**⚠ WARNING: FAILURE TO FOLLOW THESE
INSTRUCTIONS COULD RESULT IN SERIOUS
INJURY OR DEATH.**

- Do not use extension cords with this product.
- Outdoor use only.
- Retain instructions with product.

**⚠ AVERTISSEMENT : LE NON RESPECT DE CES
INSTRUCTIONS PEUT ENTRAÎNER DES
BLESSURES GRAVES, VOIRE MORTELLES.**

- N'utilisez pas de cordons
prolongateurs avec ce produit.
- N'utilisez ce produit qu'à l'extérieur.
- Conservez les instructions avec le
produit.

**⚠ ADVERTENCIA: EL NO SEGUIR ESTAS
INSTRUCCIONES PUEDE PROVOCAR LESIONES
SERIAS O LA MUERTE.**


- No utilice cordones de extensión con
este producto.
- Uso en exteriores solamente.
- Guarde las instrucciones con el
producto.



62452A000-10/05

452A

ATTENTION: PLEASE DO NOT RETURN TO THE STORE. IF YOU ENCOUNTER PROBLEMS, OR HAVE QUESTIONS, PLEASE CALL OUR QUALIFIED CUSTOMER SERVICE TECHNICIANS AT 1-800-321-0183.

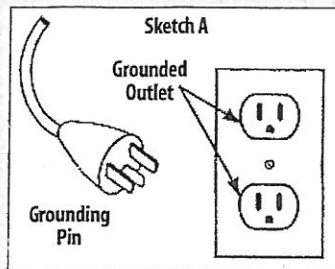

USE ONLY ON GFCI PROTECTED RECEPTACLES ⚠ CAUTION ⚠

GROUNDING INSTRUCTIONS FOR ALL GROUNDED, CORD-CONNECTED PRODUCTS

This product should be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This product is equipped with a cord having a grounding wire with an appropriate grounding plug. This plug must be plugged into an outlet that is properly installed and grounded in accordance with all local codes and ordinances. **DANGER** - Improper installation of the grounding plug can result in a risk of electric shock. If repair or replacement of the cord or plug is necessary, do not connect the grounding wire to either a flat blade terminal. The wire with insulation having an outer surface that is green, with or without yellow stripes, is the grounding wire. Check with a qualified electrician or serviceman if the grounding instructions are not completely understood, or if in doubt as to whether the product is properly grounded. Do not modify the plug provided; if it will not fit the outlet, have the proper outlet installed by a qualified electrician. For a grounded, cord-connected product, rated less

than 15 amperes and intended for use on a nominal 100-120-volt supply circuit, these instructions should be followed. This product is for use on a nominal 100-120-volt supply circuit, and has a grounding plug that looks like the plug illustrated in sketch A. Temporary adapters should not be used. Do not use product until a properly grounded outlet (sketch A) can be installed by a qualified electrician.

⚠ WARNING: FAILURE TO FOLLOW THESE INSTRUCTIONS COULD RESULT IN SERIOUS INJURY OR DEATH.



Maximum number of children: 3



Total weight limit: 250 lbs. (113 kg.)



Maximum individual height: 5 feet (152 cm)



Adult supervision required. Do not leave children unattended.



Age



No sharp objects.



No shoes, no glasses.



No flipping.



Do not slide head first.



No wrestling.



No hands or feet on net.



Do not use in windy conditions.



Do not leave out in rain.



Do not allow children to touch fan or electrical cord.



Must be anchored using stakes.

ADULT SUPERVISION AND SETUP REQUIRED. This product should be inflated or deflated only by an adult.

Do not allow children to play in the product until it is fully inflated.

1. ATTENTION: Blower should remain on and continuously inflate bouncer during use. Airflow through seams is normal. Do not try to seal or repair seams.

2. To deflate, switch to the "OFF" position.

3. Prior to deflating, remove all children.

- Intended for outdoor domestic family use only. Not for use in public areas or as a rental.
- Instruct children on proper use of this product. Do not use in a manner other than intended.
- Instruct children not to attach items to the product that are not specifically designed for use with the equipment, such as but not limited to, jump ropes, clothesline, pet leashes, cables and chains as they may cause a strangulation hazard.
- Bounce away from others and sides, especially the opening.
- Do not jump onto or off of product.
- Ensure proper set up prior to use.
- Do not allow children to play together who are unevenly matched in weight and height.
- Keep fabric clear of all flame and ignition sources.
- Do not drag across concrete, pavement or other rough surfaces.
- Retain these instructions for future use.
- Helmets, headgear, loose clothing, scarves, hoods, or clothing containing drawstrings should not be worn when using this product.
- Do not allow other toys or objects inside the product.
- Keep pets away from product.

⚠ SET UP: ADULTS ONLY

DO NOT SET UP ON HARD SURFACES. FOLLOW ALL INSTRUCTIONS PROVIDED.

⚠ WARNING: Falls onto hard surfaces could result in head or other serious injuries. Never put on concrete, asphalt, packed earth, wood or other hard surfaces. Carpet over hard floors may not prevent injury. Product is heavy. Use caution when lifting.

- Do not use extension cords with this product.
- Set-up in outdoor location only that meets the following criteria:
 - Place on level ground on grass or dirt surface to allow proper use of stakes.
 - Minimum clearance zones: Place at least 6' (1.8m) away from any other objects. Objects to be avoided include but are not limited to fences, buildings, trees, overhead branches, laundry lines, electrical wires, walls, or bodies or sources of water.
 - Placing on slanted or uneven surfaces may cause the product to tip.
- Sudden gusts of wind may lift the product off of the ground.
- After inflation, the fan should run continuously while children are playing.

CAUTION: The fan is a high volume fan, and is capable of moving lots of air very quickly. Place the fan in an area where it will not suck in dirt or leaves. Keep fan and power cord away from children, water, pools, spas and traffic.

NOTE: Set up as close to power source as possible. The product should be periodically examined for potentially unsafe conditions such as: damaged cord, plug, housing, or parts, and that in the event such damage is found, the product should not be used until properly repaired. Never leave the fan outside in the rain or elements when not in use. Refer to the instructions for set-up, storage, maintenance and care.